


PPTEMPKIT

DUAL-ZONE DIGITAL THERMOMETER

WITH WIRELESS REMOTE TEMPERATURE SENSOR

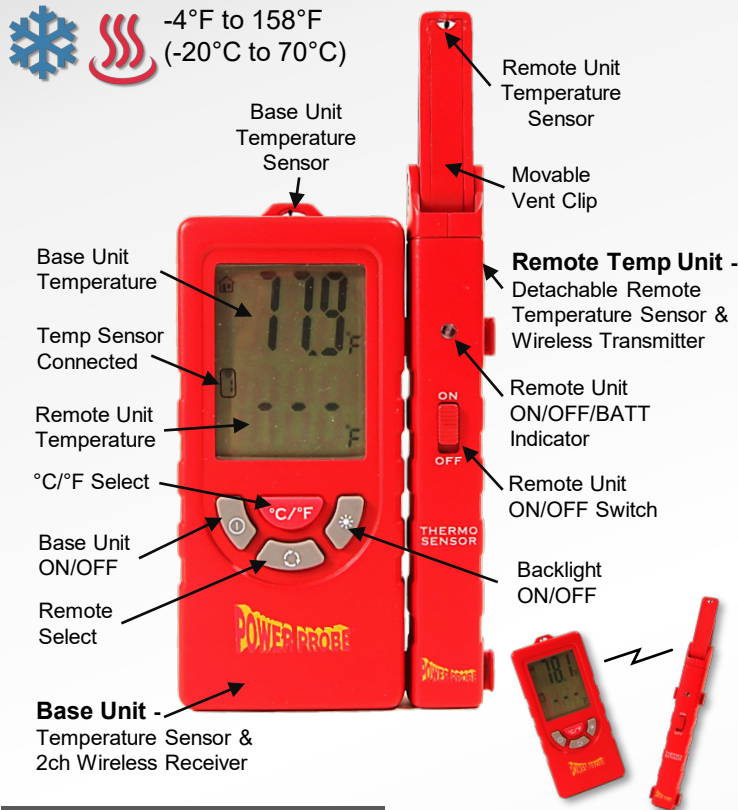

FEATURES

- Dual Zone Readings
- Bright Backlit LCD
- Wireless Remote Sensor
- °F and °C - Selectable
- Opt. 2nd Remote Sensor

SPECIFICATIONS

- Operating Environment: -4°F to 158°F (-20°C to 70°C)
- Measuring Range: -4°F to 158°F (-20°C to 70°C)
- Accuracy: ±2.0°F (±2.0°C)
- Wireless Range: 60m (195ft.) max.
- Resolution: 0.1°
- Battery Type: 2 x AA and 2 x AAA
- Battery Life: 400 hours

OPERATION

1. Remove battery cover from rear of Base Unit.
2. Install two (2) AA batteries into battery cavity and replace battery cover.
3. Press Base Unit Power button for one sec. to turn ON/OFF.
4. LCD display will show current temperature of Base Unit Temp Sensor above the display.
5. Remove battery cover from rear of Remote Unit
6. Install two (2) AAA batteries into battery cavity and replace battery cover.
7. Slide Remote Unit Power switch to the ON position. Indicator Light should flash.
8. When paired, Remote Unit temperature will display on Base Unit second line.
9. Press Backlight button to turn LCD backlight ON/OFF.
10. Press °C/°F button to change the Base Unit display reading from Fahrenheit to Celsius.
11. Press the Cycle/Select button to select optional second Remote Unit.

WARRANTY

Power Probe Warranty

- Power Probe products undergo a strict quality control inspection for workmanship, function, and safety before leaving the factory. From the date of purchase, we will warranty/repair Power Probe products for one (1) year against defects in parts and workmanship. All repairs due to misuse will be charged a fee not to exceed the cost of the tool. All warranty units must be accompanied by a copy of the original sales receipt. In the event of a malfunction or defective unit, please call or email your Power Probe dealer.

INTRODUCTION

- Thank you for purchasing the Power Probe PPTEMPKIT Dual Zone Thermometer with Wireless Remote Temperature Sensor.
- Please read through this manual in it's entirety to fully enjoy the benefits and features of this product.
- Please keep this manual for future reference.
- The PPTEMPKIT has a built in temp sensor in the Base Unit, plus a 2nd Remote Unit temp sensor that transmits the Remote Unit temperature reading back to the Base Unit.
- The Remote temp sensor can transmit temperature readings up to 60m (195ft.) away from Base Unit.
- Monitor temperature differences – Ambient vs. AC outlet, Inside vs. Outside Temps, and more.
- Use moveable clip to attach Remote to air vents or grilles to monitor outlet temps.

www.powerprobe.com

1-800-655-3585 info@powerprobe.com


Power Probe TeK, LLC. 890 Mariner St. Brea, CA 92821



PPTEMPKIT

DUAL-ZONE DIGITAL THERMOMETER

WITH WIRELESS REMOTE TEMPERATURE SENSOR

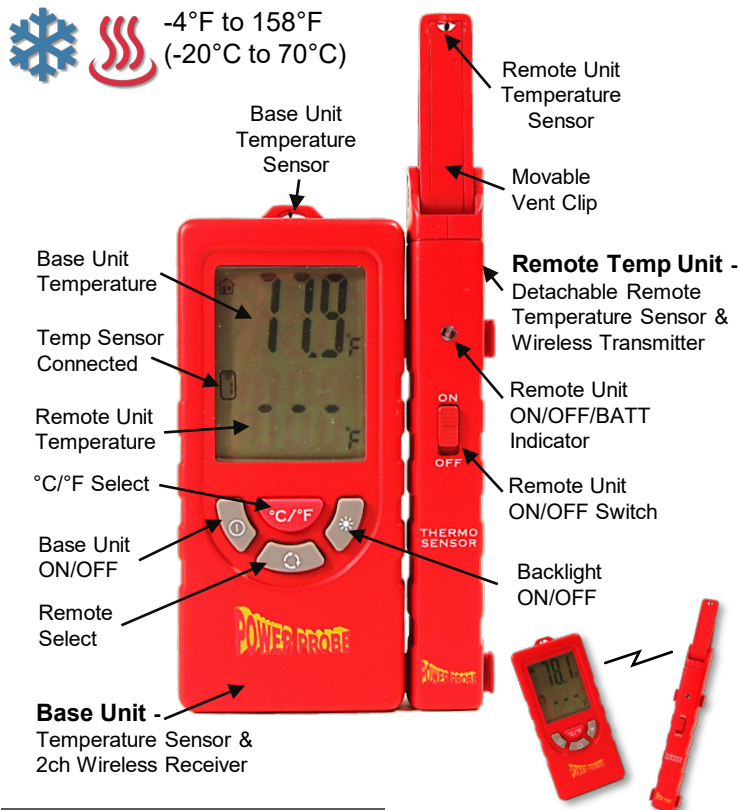

FEATURES

- Dual Zone Readings
- Bright Backlit LCD
- Wireless Remote Sensor
- °F and °C - Selectable
- Opt. 2nd Remote Sensor

SPECIFICATIONS

- Operating Environment: -4°F to 158°F (-20°C to 70°C)
- Measuring Range: -4°F to 158°F (-20°C to 70°C)
- Accuracy: ±2.0°F (±2.0°C)
- Wireless Range: 60m (195ft.) max.
- Resolution: 0.1°
- Battery Type: 2 x AA and 2 x AAA
- Battery Life: 400 hours

OPERATION

1. Remove battery cover from rear of Base Unit.
2. Install two (2) AA batteries into battery cavity and replace battery cover.
3. Press Base Unit Power button for one sec. to turn ON/OFF.
4. LCD display will show current temperature of Base Unit Temp Sensor above the display.
5. Remove battery cover from rear of Remote Unit
6. Install two (2) AAA batteries into battery cavity and replace battery cover.
7. Slide Remote Unit Power switch to the ON position. Indicator Light should flash.
8. When paired, Remote Unit temperature will display on Base Unit second line.
9. Press Backlight button to turn LCD backlight ON/OFF.
10. Press °C/°F button to change the Base Unit display reading from Fahrenheit to Celsius.
11. Press the Cycle/Select button to select optional second Remote Unit.

WARRANTY

Power Probe Warranty

- Power Probe products undergo a strict quality control inspection for workmanship, function, and safety before leaving the factory. From the date of purchase, we will warranty/repair Power Probe products for one (1) year against defects in parts and workmanship. All repairs due to misuse will be charged a fee not to exceed the cost of the tool. All warranty units must be accompanied by a copy of the original sales receipt. In the event of a malfunction or defective unit, please call or email your Power Probe dealer.

INTRODUCTION

- Thank you for purchasing the Power Probe PPTEMPKIT Dual Zone Thermometer with Wireless Remote Temperature Sensor.
- Please read through this manual in it's entirety to fully enjoy the benefits and features of this product.
- Please keep this manual for future reference.
- The PPTEMPKIT has a built in temp sensor in the Base Unit, plus a 2nd Remote Unit temp sensor that transmits the Remote Unit temperature reading back to the Base Unit.
- The Remote temp sensor can transmit temperature readings up to 60m (195ft.) away from Base Unit.
- Monitor temperature differences – Ambient vs. AC outlet, Inside vs. Outside Temps, and more.
- Use moveable clip to attach Remote to air vents or grilles to monitor outlet temps.

www.powerprobe.com

1-800-655-3585 info@powerprobe.com

Power Probe TeK, LLC. 890 Mariner St. Brea, CA 92821

